



BSA

SPARES

**BANTAM
MOTOR CYCLE
Model DI**

TWO-STROKE

1949 to 1953

MODELS

DI . . . 125 c.c. (Rigid Frame)

DI . . . 125 c.c. (Spring Frame)

DI . . . 125 c.c. (Competition)

STANDARD BOLTS. All Bolts are C.E.I. unless otherwise stated.

Part No.	Length under Head.	Thickness of Head.	Length of Thread.	Across Flats.	Diameter.
2-14	1 1/32"	3/16"	13/16"	.440" Hex.	1/4"
2-204	1/2"	3/16"	1/2"	.440 Hex.	1/4"
2-220	3/8"	3/16"	3/8"	.440" Hex.	1/4"
2-1354	.641"	.187"	.641"	.440" Hex.	1/4"
2-1402	7/8"	1/8"	3/8"	.440" Hex.	1/4"
2-2273	7/16"	5/32"	3/8"	.440" Hex.	1/4"
24-225	.750"	.187"	3/8"	.440" Hex.	1/4"
1-5069	.625"	.187"	.625"	.525" Hex.	5/16"
2-129	.750"	.250"	.625"	.440" Hex.	5/16"
2-1934	.750"	.156"	.625"	.440" Hex.	5/16"
2-6026	1.187"	.156"	.625"	.440" Hex.	5/16"
15-480	1.109"	.250"	.781"	.525" Hex.	5/16"
15-1355	1.500"	.218"	.625"	.525" Hex.	5/16"
15-7354	.625"	.156"	.625"	.440" Hex.	5/16"
27-6311	.750"	.125"	.625"	.440" Hex.	5/16"
28-2338	.718"	.218"	.687"	.525" Hex.	5/16"
24-649	.877"	.187"	.877"	.594" Hex.	3/8"
65-4185	2.687"	.250"	.750"	.504" Hex.	3/8"

All Bolts are C.E.I. (Screwdriver slotted) unless otherwise stated.

Part No.	Length under Head.	Thickness of Head.	Length of Thread.	Across Head.	Diameter.
1-4606	.500"	.125"	.500"	.312"	3/16"
2-360	.406"	.078"	.406"	.312"	3/16"
2-498	.312"	.062"	.312"	.312"	3/16" Whit.
2-1309	.343"	.062"	.343"	.312"	3/16"
2-2582	.343"	.125"	.343"	.250"	3/16" Whit.
24-7065	.250"	.062"	.250"	.312"	3/16"
2-77	.312"	.062"	.312"	.375"	1/4"
2-79	.500"	.109"	.500"	.375"	1/4"
2-510	.656"	.093"	.375"	.375"	1/4"
2-1500	.687"	.109"	.375"	.375"	1/4"
2-2210	.718"	.062"	.562"	.562"	1/4"
2-2378	.656"	.109"	.656"	.375"	1/4"
15-7161	.500"	.125"	.312"	.500"	1/4"
2-2980	1.25"	.93"	.625"	.562"	5/16"

STANDARD NUTS. All Nuts are C.E.I. unless otherwise stated.

Part No.	Across Flats.	Thickness.	Size.	Part No.	Across Flats.	Thickness.	Size.
1-4616	.340" Hex.	.162"	3/16"	2-1813	.594" Hex.	.218"	3/8"
2-47	.312" Hex.	.140"	3/16"	3-720	.594 Hex.	.187"	3/8"
2-1588	.255" Hex.	.110"	3/16"	24-5161	.594" Hex.	.343"	3/8"
15-8147	.340" Hex.	.125"	3/16"	24-5764	.782" Hex.	.312"	3/8"
25-7151	.340" Hex.	.187"	3/16"	2-440	.594" Hex.	.312"	7/16"
1-6032	.340" Hex.	3/16"	1/4"	2-933	.525" Hex.	.375"	7/16"
2-51	.440" Hex.	.250"	1/4"	2-1925	.782" Hex.	.375"	7/16"
2-53	.440" Hex.	.109"	1/4" Whit.	15-152	.592" Hex.	.406"	7/16"
2-443	.440" Hex.	.109"	1/4"	15-541	.782" Hex.	.281"	7/16"
2-1027	.340" Hex.	1/8"	1/4"	24-5860	.594" Hex.	.187"	7/16"
2-2395	.440" Hex.	.187"	1/4"	25-4325	.919" Hex.	.540"	7/16"
2-49	.525" Hex.	.218"	5/16"	2-52	.919" Hex.	.406"	1/2"
2-833	.440" Hex.	.343"	5/16"	2-124	.782" Hex.	.203"	1/2"
2-1616	.440" Hex.	.125"	5/16"	24-7000	.782" Hex.	.250"	1/2"
15-5196	.525" Hex.	.281"	5/16"	27-6716	.782" Hex.	.187"	1/2"
15-6524	.525" Hex.	.175"	5/16"	2-835	.919" Hex.	.375"	9/16"
24-563	.440" Hex.	.187"	5/16"	15-1455	.782" Hex.	.218"	9/16"
24-6040	.525" Hex.	.156"	5/16"	24-4255	.919" Hex.	.187"	9/16"
1-1706	.594" Hex.	.250"	3/8"	28-53	.782" Hex.	.344"	9/16"
2-46	.594" Hex.	.312"	3/8"				

STANDARD WASHERS (Plain).

Part No.	Outside Dia.	Inside Dia.	Thickness.	Part No.	Outside Dia.	Inside Dia.	Thickness.
1-1804	.680"	.385"	.072"	2-2580	.500"	.275"	.064"
2-130	.687"	.380"	.080"	3-3525	.562"	.218"	.048"
2-370	.625"	.317"	.156"	15-39	.843"	.505"	.064"
2-525	.500"	.255"	.048"	15-431	.750"	.442"	.064"
2-861	.750"	.380"	.081"	15-5155	.525"	.328"	.048"
2-923	.625"	.317"	.062"	24-594	.937"	.505"	.092"
2-1096	.375"	.192"	.044"	24-7911	.875"	.380"	.156"
2-1291	.750"	.522"	.080"	25-7180	1.00"	.281"	.048"
2-1374	.656"	.255"	.080"	26-9461	.562"	.203"	.048"
2-1945	.875"	.442"	.064"	27-5676	1.00"	.380"	.092"
2-2138	.380"	.750"	.064"	27-8560	.625"	.255"	.048"

STANDARD WASHERS (Spring).

Part No.	Outer Dia.	Inside Dia.	Thickness.	Part No.	Outer Dia.	Inside Dia.	Thickness.
2-522	.750"	.390"	.056"	15-716	.937"	.453"	.064"
2-995	.656"	.380"	.040" double	24-978	.437"	.255"	.040"
2-1462	.593"	.255"	.040"	24-6035	.593"	.317"	.040" double
2-1967	.875"	.440"	.064"	27-6043	.750"	.437"	.046" double
2-2903	.562"	.406"	.062"	24-8784	.625"	.315"	.040"
3-110	.441"	.281"	.080"	35-33	.500"	.343"	.080"
3-111	.614"	.406"	.104"				

STANDARD WASHERS (Shakeproof).

Part No.	Outer Diameter.	Inside Diameter.	Part No.	Outer Diameter.	Inside Diameter.
29-541	1/2"	1/4"	36-399	11/16"	3/8"
29-3319	3/8"	3/16"	65-595	7/8"	1/2"
36-341	9/16"	5/16"	66-4707	11/16"	3/8"
36-382	9/16"	5/16"	66-4708	3/4"	7/16"

Plate 1

ENGINE and GEARBOX

Bantam

Plate Ref. Number.	Models.	Part No.	Description.	Number per set.
1	...	Bantam ... 21-4	Cylinder barrel stud nut ...	4
2	...	Bantam ... 2-923	Cylinder barrel stud washer ...	4
3	...	Bantam ... 90-2	Cylinder head ...	1
4	...	Bantam ... 66-102	Spark plug washer ...	1
5	...	Bantam ... 65-112	Spark plug ...	1
6	...	Bantam ... 90-85	Gudgeon pin circlip ...	2
7	...	Bantam ... 90-84	Gudgeon pin ...	1
8	...	Bantam ... 90-136	Piston only with pegs (Standard) ...	1
	...	Bantam ... 90-276	Piston only with pegs (1st oversize) ...	1
	...	Bantam ... 90-435	Piston only with pegs (2nd oversize) ...	1
9	...	Bantam ... 90-9	Compression ring ...	2
	...	Bantam ... 90-278	Compression ring (1st oversize) ...	2
	...	Bantam ... 90-394	Compression ring (2nd oversize) ...	2
10	...	Bantam ... 90-123	Piston ring peg ...	2
11	...	Bantam ... 90-162	Crankcase with fixed fittings (offside) ...	1
12	...	Bantam ... 90-111	Cylinder barrel stud ...	4
13	...	Bantam ... 2-2894	Dipstick washer (fibre) ...	1
14	...	Bantam ... 90-112	Dipstick ...	1
15	...	Bantam ... 90-117	Primary chain cover gasket ...	1
16	...	Bantam ... 90-139	Primary chain cover complete ...	1
17	...	Bantam ... 90-124	Primary chain cover screw (long) ...	2
18	...	Bantam ... 90-262	Primary chain cover and drain plug washer (fibre) ...	7
19	...	Bantam ... 89-3208	Gearchange lever rubber ...	1
20	...	Bantam ... 90-268	Gearchange lever ...	1
21	...	Bantam ... 90-135	Kickstart pedal rubber ...	1
22	...	Bantam ... 90-91	Kickstart pedal ...	1
23	...	Bantam ... 21-62	Gearchange lever bolt ...	1
	...	Bantam ... 21-62	Kickstart pedal bolt ...	1
24	...	Bantam ... 2-2580	Gearchange lever bolt washer ...	1
	...	Bantam ... 2-2580	Kickstart pedal bolt washer ...	1
25	...	Bantam ... 21-29	Gearchange lever bolt nut ...	1
	...	Bantam ... 21-29	Kickstart pedal bolt nut ...	1
26	...	Bantam ... 90-125	Primary chain cover screw (short) ...	1
27	...	Bantam ... 65-3062	Primary chain cover screw ...	2
28	...	Bantam ... 90-10	Crankshaft bearing ...	1
29	...	Bantam ... 90-108	Crankcase dowel bush ...	2
30	...	Bantam ... 90-75	Mainshaft bearing circlip ...	1
31	...	Bantam ... 90-11	Mainshaft bearing ...	1
32	...	Bantam ... 90-368	Clutch cover screw ...	3
33	...	Bantam ... 29-3319	Clutch cover screw washer (shakeproof) ...	3
34	...	Bantam ... 90-336	Clutch cover ...	1
35	...	Bantam ... 90-27	Clutch casing snap ring ...	1
36	...	Bantam ... 90-341	Clutch spring cup plate ...	1
37	...	Bantam ... 90-83	Layshaft bush ...	1
38	...	Bantam ... 90-82	Layshaft gear (32T) ...	1
	...	Bantam ... 90-448	Layshaft gear (28T) (close ratio) (as required) ...	1
39	...	Bantam ... 90-81	Layshaft gear (25T) ...	1
	...	Bantam ... 90-449	Layshaft sliding gear (25T) (close ratio) (as required) ...	1
	...	Bantam ... 90-457	Layshaft sliding gear (26T) (wide ratio) (as required) ...	1
40	...	Bantam ... 90-351	Layshaft with gear (19T) ...	1
	...	Bantam ... 90-476	Layshaft with gear (23T) (close ratio) (as required) ...	1
41	...	Bantam ... 90-353	Layshaft gear only (19T) ...	1
	...	Bantam ... 90-447	Layshaft gear (23T) (close ratio) (as required) ...	1
42	...	Bantam ... 90-50	Gear selector fork shaft ...	1
43	...	Bantam ... 90-51	Gear selector fork spring ring ...	1
44	...	Bantam ... 90-54	Gear selector fork spring cup ...	1
45	...	Bantam ... 90-53	Gear selector fork spring ...	1
46	...	Bantam ... 90-88	Kickstart quadrant spindle ...	1
47	...	Bantam ... 90-179	Kickstart quadrant ...	1
48	...	Bantam ... 90-89	Kickstart quadrant spring ...	1
49	...	Bantam ... 90-90	Kickstart quadrant spring plate ...	1
50	...	Bantam ... 90-58	Gear selector arm swivel pin (not sold separately) ...	1
	...	Bantam ... 90-56	Gear selector arm bracket complete ...	1
51	...	Bantam ... 90-57	Gear selector arm bracket (not sold separately) ...	1
52	...	Bantam ... 90-173	Gear selector arm ...	1
53	...	Bantam ... 90-63	Gear selector arm bracket lockwasher ...	2
54	...	Bantam ... 90-62	Gear selector arm bracket screw ...	2
55	...	Bantam ... 90-94	Gear indicator lever spindle ...	1
56	...	Bantam ... 1-6008	Gear indicator lever bolt ...	1
57	...	Bantam ... 90-93	Gear indicator lever ...	1

Plate 1.

ENGINE AND GEARBOX

Bantam

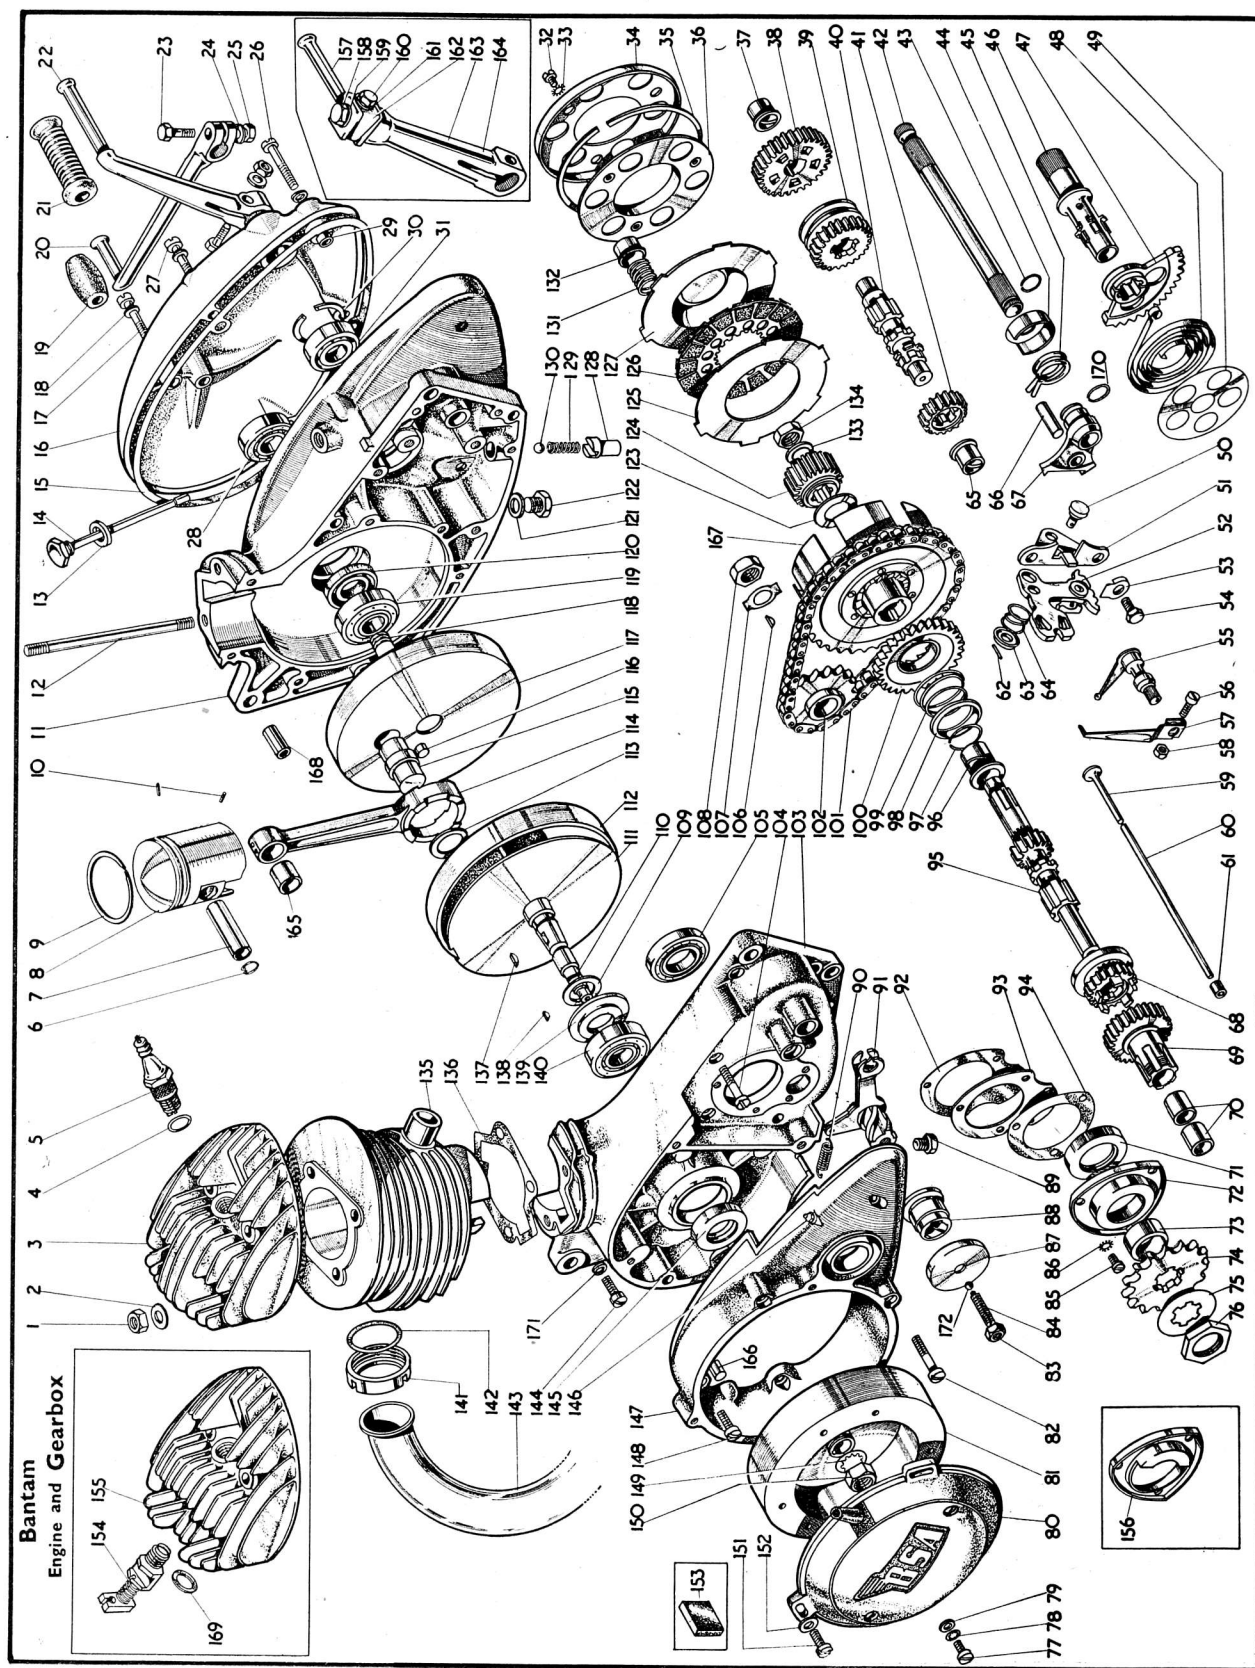


Plate 1—continued

ENGINE and GEARBOX

Bantam

Plate Ref. Number.	Models.	Part No.	Description.	Number per set.
58	Bantam	1-4616	Gear indicator lever bolt nut	1
59	Bantam	90-98	Clutch push rod (short)	1
60	Bantam	90-99	Clutch push rod (long)	1
61	Bantam	90-132	Clutch push rod bush (rubber)	1
62	Bantam	90-61	Gear selector swivel pin peg	1
63	Bantam	90-60	Gear selector arm spring cup	1
64	Bantam	90-59	Gear selector arm retaining spring	1
65	Bantam	90-83	Layshaft bush	1
66	Bantam	90-52	Gear selector fork peg (not sold separately)	1
67	Bantam	90-190	Gear selector fork and peg	1
68	Bantam	90-49	Gear selector fork (not sold separately)	1
68	Bantam	90-74	Mainshaft gear (22T)	1
68	Bantam	90-458	Mainshaft sliding gear (21T) (wide ratio) (as required)	1
69	Bantam	90-65	Mainshaft primary gear (28T)	1
69	Bantam	90-474	Primary drive gear (close ratio) (as required) (24T)	1
70	Bantam	90-67	Mainshaft primary gear bush	2
71	Bantam	89-3006	Mainshaft oil seal	1
72	Bantam	90-72	Mainshaft oil seal housing	1
73	Bantam	90-71	Gearbox sprocket distance sleeve	1
74	Bantam	90-68	Gearbox sprocket (15T) (Standard)	1
74	Bantam	90-473	Gearbox sprocket (16T) (Competition only)	1
74	Bantam	90-299	Gearbox sprocket (14T) (Competition only)	1
75	Bantam	90-70	Gearbox sprocket lockwasher	1
76	Bantam	90-172	Gearbox sprocket nut	1
77	Bantam	90-256	Flywheel magneto cam screw (Wico Pacy)	1
78	Bantam	90-258	Flywheel magneto cam screw washer (Wico Pacy)	1
79	Bantam	90-257	Flywheel magneto cam screw washer (Wico Pacy)	1
80	Bantam	90-444	Flywheel and generator complete (Wico Pacy)	1
81	Bantam	11B-55AAA	Generator flywheel only (Wico Pacy)	1
81	Bantam	90-295	Generator fixing stud (Lucas generator)	4
81	Bantam	90-296	Generator (Lucas)	1
81	Bantam	21-29	Generator fixing stud nut (Lucas)	2
81	Bantam	90-346	Generator fixing stud washer (Lucas)	4
81	Bantam	90-297	Generator extracting screw (Lucas)	1
81	Bantam	90-298	Rotor fixing screw (Lucas)	1
81	Bantam	90-118	Generator inspection cover (Lucas)	1
81	Bantam	1-4606	Generator inspection cover screw (Lucas)	2
82	Bantam	90-125	Crankcase fixing screw (long)	2
83	Bantam	89-366	Clutch adjusting screw locknut	1
84	Bantam	90-105	Clutch adjusting screw	1
85	Bantam	2-498	Mainshaft oil seal housing screw	5
86	Bantam	29-3319	Mainshaft oil seal housing washer (shakeproof)	5
87	Bantam	90-106	Clutch operating lever cap	1
88	Bantam	90-184	Clutch operating lever bush	1
89	Bantam	90-261	Crankcase drain plug	1
90	Bantam	90-122	Clutch operating lever spring	1
91	Bantam	90-180	Clutch operating lever complete	1
92	Bantam	90-272	Mainshaft thrust plate gasket	1
93	Bantam	90-133	Mainshaft bearing thrust plate	1
94	Bantam	90-73	Mainshaft oil seal housing gasket	1
95	Bantam	90-64	Gearbox mainshaft	1
95	Bantam	90-445	Gearbox mainshaft (close ratio) (as required)	1
96	Bantam	90-76	Clutch chainwheel distance bush	1
97	Bantam	90-24	Clutch chainwheel circlip	1
98	Bantam	90-40	Kickstart pinion spring retainer	1
99	Bantam	90-39	Kickstart pinion spring	1
100	Bantam	90-177	Kickstart pinion	1
101	Bantam	90-134	Primary chain	1
102	Bantam	90-120	Crankshaft sprocket (17T)	1
103	Bantam	90-163	Crankcase with fixed fittings (nearside) (Wico Pacy generator)	1
103	Bantam	90-164	Crankcase with fixed fittings (nearside) (Lucas generator)	1
104	Bantam	90-125	Crankcase fixing screw (long)	2
105	Bantam	90-12	Gearbox sleeve pinion bearing	1
106	Bantam	35-1896	Crankshaft sprocket key	1
107	Bantam	90-121	Crankshaft sprocket lockwasher	1
108	Bantam	90-340	Crankshaft nut	1
109	Bantam	90-152	Crankshaft shim (.003") (as required)	—
109	Bantam	90-153	Crankshaft shim (.004") (as required)	—
109	Bantam	90-154	Crankshaft shim (.005") (as required)	—
109	Bantam	90-155	Crankshaft shim (.010") (as required)	—

Plate 1—continued

ENGINE and GEARBOX

Bantam

Plate Ref. Number.	Models.	Part No.	Description.	Number per set.
110	... Bantam	... 90-168	... Flywheel with spindle (nearside) (Wico Pacy) (up to 1953 ...	1
...	... Bantam	... 90-17	... Flywheel with spindle (nearside) (Lucas) (up to 1953)	1
111	... Bantam	... 90-171	... Flywheel cover plate	1
112	... Bantam	... 90-596	... Flywheel with spindle (nearside) (Wico Pacy) (1953)	1
...	... Bantam	... 90-603	... Flywheel with spindle (nearside) (Lucas) (1953)	1
113	... Bantam	... 90-499	... Big end thrust washer (Lucas) (1953)	1
...	... Bantam	... 90-362	... Connecting rod with crankpin, rollers and gudgeon pin bush (up to 1953)	1
...	... Bantam	... 90-601	... Connecting rod with crankpin, rollers and gudgeon pin bush	1
114	... Bantam	... 90-166	... Flywheel and connecting rod assembly (Wico Pacy) (up to 1953)	1
...	... Bantam	... 90-595	... Flywheel and connecting rod assembly (Wico Pacy) (1953)	1
...	... Bantam	... 90-13	... Flywheel and connecting rod assembly (Lucas) (up to 1953)	1
...	... Bantam	... 90-602	... Flywheel and connecting rod assembly (Lucas) (1953)	1
115	... Bantam	... 90-498	... Crankpin (not sold separately)	1
116	... Bantam	... 90-594	... Big end roller (not sold separately)	1
117	... Bantam	... 90-597	... Flywheel complete (offside) (Wico Pacy) (1953)	1
...	... Bantam	... 90-604	... Flywheel complete (offside) (Lucas) (1953)	1
118	... Bantam	... 90-167	... Flywheel with spindle (offside) (Wico Pacy) (up to 1953)	1
...	... Bantam	... 90-18	... Flywheel with spindle (offside) (Lucas) (up to 1953)	1
119	... Bantam	... 89-3023	... Crankshaft bearing	1
120	... Bantam	... 90-284	... Crankshaft oil seal	1
121	... Bantam	... 2-2894	... Drain plug washer (fibre)	1
122	... Bantam	... 90-115	... Drain plug	1
123	... Bantam	... 90-283	... Clutch chainwheel thrust washer	1
124	... Bantam	... 90-28	... Clutch hub	1
125	... Bantam	... 90-37	... Clutch driven plate	2
126	... Bantam	... 90-34	... Clutch driving plate complete	3
127	... Bantam	... 90-32	... Clutch actuating plate	2
128	... Bantam	... 90-47	... Gear selector arm spring socket	1
129	... Bantam	... 90-46	... Gear selector arm spring	1
130	... Bantam	... 90-241	... Gear selector arm ball	1
131	... Bantam	... 90-29	... Clutch spring	6
132	... Bantam	... 90-30	... Clutch spring cup	6
133	... Bantam	... 15-39	... Mainshaft washer	1
134	... Bantam	... 90-340	... Mainshaft nut	1
135	... Bantam	... 90-1	... Cylinder barrel	1
136	... Bantam	... 90-273	... Cylinder base gasket	1
137	... Bantam	... 89-149	... Flywheel magneto key	1
138	... Bantam	... 90-246	... Flywheel magneto cam key	1
...	... Bantam	... 90-294	... Flywheel spindle peg (Lucas generator)	1
139	... Bantam	... 90-243	... Crankshaft distance collar	1
140	... Bantam	... 89-3023	... Crankshaft bearing	1
141	... Bantam	... 90-265	... Exhaust pipe union nut	1
142	... Bantam	... 90-3002	... Exhaust pipe union nut washer	1
143	... Bantam	... 90-3024	... Exhaust pipe (Standard rigid and spring frame)	1
...	... Bantam	... 90-3033	... Exhaust pipe (Competition rigid and spring frame)	1
144	... Bantam	... 65-2158	... Crankcase screw	9
145	... Bantam	... 90-147	... Crankshaft oil seal	1
...	... Bantam	... 90-284	... Crankshaft oil seal (Lucas generator)	1
146	... Bantam	... 28-2080	... Crankcase cover grease nipple (nearside)	1
...	... Bantam	... 15-5290	... Crankcase cover grease nipple (offside) (Lucas)	1
147	... Bantam	... 90-183	... Crankcase cover with fixed fittings (nearside) (Wico Pacy)	1
...	... Bantam	... 90-188	... Crankcase cover with fixed fittings (nearside) (Lucas)	1
148	... Bantam	... 90-248	... Crankcase cover fixing screw (short)	2
149	... Bantam	... 90-260	... Flywheel magneto fixing nut washer	1
150	... Bantam	... 90-259	... Flywheel magneto fixing nut	1
151	... Bantam	... 65-2158	... Flywheel magneto fixing screw	3
152	... Bantam	... 2-2580	... Flywheel magneto fixing screw washer	3
153	... Bantam	... 90-285	... Crankcase generator seal	1
154	... Bantam	... 32-1118	... Release valve	1
155	... Bantam	... 90-287	... Cylinder head (Competition model)	1
156	... Bantam	... 90-450	... Mainshaft oil seal housing (use only with 90-299 14T rear chain sprocket)	1
157	... Bantam	... 65-3427	... Kickstart crank pedal (Competition)	1
158	... Bantam	... 29-5156	... Kickstart pedal bolt (Competition)	1
159	... Bantam	... 66-4707	... Kickstart pedal bolt washer (Competition)	1

Plate 1—continued

ENGINE and GEARBOX

Bantam

Plate Ref. Number.	Models.	Part No.	Description.	Number per set.
160	... Bantam	... 2-220	... Kickstart crank spring bolt...	1
161	... Bantam	... 29-541	... Kickstart crank spring bolt washer	1
162	... Bantam	... 65-3428	... Kickstart crank pedal spring	1
163	... Bantam	... 90-348	... Kickstart crank only...	1
164	... Bantam	... 90-347	... Kickstart crank complete	1
165	... Bantam	... 90-130	... Connecting rod gudgeon pin bush	1
166	... Bantam	... 90-110	... Crankcase dowel	2
167	... Bantam	... 90-175	... Clutch chainwheel complete...	1
168	... Bantam	... 90-109	... Dowel bush	2
169	... Bantam	... 66-102	... Exhaust lifter washer (Competition)	1
170	... Bantam	... 90-55	... Gearchange selector fork circlip	1
171	... Bantam	... 90-346	... Crankcase screw washer	11
172	... Bantam	... 89-5015	... Clutch push rod ball	1

Plate 2

FRAME and FITTINGS

Bantam Standard and Competition (Rigid Frame).

Plate Ref. Number.	Model.	Part No.	Description.	Number per set.
1	... Standard (rigid)	... 90-4805	... Footrest rubber	2
...	... Competition (rigid)	... 29-7551	... Footrest rubber	2
2	... Standard (rigid)	... 21-5106	... Footrest rod nut	2
...	... Competition (rigid)	... 21-5105	... Footrest rod nut	2
3	... Standard (rigid)	... 3-107	... Footrest rod spring washer	2
...	... Competition (rigid)	... 3-110	... Footrest rod spring washer	2
4	... Standard (rigid)	... 24-5914	... Footrest rubber locating washer (outside)	2
5	... Standard (rigid)	... 90-4806	... Footrest rod distance tube	2
6	... Standard (rigid)	... 2-108	... Footrest rubber locating washer (inside)	2
...	... Standard (rigid)	...	...	...
7	... Competition (rigid)	... 90-4719	... Central stand sleeve (offside)	1
...	... Standard (rigid)	...	...	...
8	... Competition (rigid)	... 90-7008	... Rear brake pedal return spring	1
...	... Standard (rigid)	...	...	...
9	... Competition (rigid)	... 21-5102	... Engine mounting bolt (bottom) nut	2
...	... Standard (rigid)	...	...	...
10	... Competition (rigid)	... 2-1462	... Engine mounting bolt (bottom) washer (spring)	2
...	... Standard (rigid)	...	...	...
11	... Competition (rigid)	... 2-1374	... Engine mounting bolt (bottom) washer (plain)	4
...	... Standard (rigid)	...	...	...
12	... Competition (rigid)	... 21-5103	... Engine mounting bolt (top) nut	2
...	... Standard (rigid)	...	...	...
13	... Competition (rigid)	... 24-8784	... Engine mounting bolt (top) washer (spring)	2
...	... Standard (rigid)	...	...	...
14	... Competition (rigid)	... 2-923	... Engine mounting bolt (top) washer (plain)	4
...	... Standard (rigid)	...	...	...
15	... Competition (rigid)	... 65-5319	... Steering head ballrace cone	2
...	... Standard (rigid)	...	...	...
16	... Competition (rigid)	... $\frac{3}{16}$ "	... Steering head ball (steel)	48
...	... Standard (rigid)	...	...	...
17	... Competition (rigid)	... 65-4465	... Ball head cup	2
...	... Standard (rigid)	...	...	...
18	... Competition (rigid)	... 28-2080	... Ball head grease nipple	1
...	... Standard (rigid)	...	...	...
19	... Competition (rigid)	... 65-5321	... Steering head dust cap	1
...	... Standard (rigid)	...	...	...
20	... Competition (rigid)	... 90-4001	... Frame complete with fixed fittings	1
...	... Standard (rigid)	...	...	...
21	... Competition (rigid)	... 21-5670	... Engine mounting bolt (top)	2
...	... Standard (rigid)	...	...	...
22	... Competition (rigid)	... 21-5620	... Engine mounting bolt (bottom)	2
...	... Standard (rigid)	... 90-7001	... Rear brake pedal complete	1
23	... Competition (rigid)	... 90-7010	... Rear brake pedal complete	1

